



Positronic Industries
connectpositronic.com

COMPLIANT PRESS-FIT TERMINATION CONNECTOR INSTALLATION TOOLS

USE INDICATED POSITRONIC TOOLS FOR BEST RESULTS

SERIES	VARIANT	Arbor Press	Male Seating	Male Seating, w/o shaft	Female Seating	Female Seating, w/o shaft	Replacement Pins, SIZE 22	Replacement Pins, SIZE 20	Replacement Pins, SIZE 8	Replacement Pins, SIZE 16	Replacement Pins, SIZE 12	Support Tool
CB	11W1	9530-1-0	9512-2-0-41		9512-21-0-41			855-347-18-41	855-347-19-41			
CB	13W3	9530-1-0	9512-3-0-41		9512-24-0-41			855-347-18-41	855-347-19-41			
CB	13W6	9530-1-0	9512-4-0-41		9512-28-0-41			855-347-18-41	855-347-19-41			
CB	17W2	9530-1-0	9512-3-0-41		9512-25-0-41			855-347-18-41	855-347-19-41			
CB	17W5	9530-1-0	9512-4-0-41		9512-29-0-41			855-347-18-41	855-347-19-41			
CB	21W1	9530-1-0	9512-3-0-41		9512-26-0-41			855-347-18-41	855-347-19-41			
CB	21WA4	9530-1-0	9512-4-0-41		9512-30-0-41			855-347-18-41	855-347-19-41			
CB	24W7	9530-1-0	9512-5-0-41		9512-33-0-41			855-347-18-41	855-347-19-41			
CB	25W3	9530-1-0	9512-4-0-41		9512-31-0-41			855-347-18-41	855-347-19-41			
CB	27W2	9530-1-0	9512-4-0-41		9512-32-0-41			855-347-18-41	855-347-19-41			
CB	2WK2	9530-1-0	9512-40-0-41		9512-41-0-41			855-347-18-41	855-347-19-41			
CB	36W4	9530-1-0	9512-5-0-41		9512-34-0-41			855-347-18-41	855-347-19-41			
CB	3W3	9530-1-0	9512-2-0-41		9512-19-0-41			855-347-18-41	855-347-19-41			
CB	3WK3	9530-1-0	9512-385-0-41		9512-39-0-41			855-347-18-41	855-347-19-41			
CB	43W2	9530-1-0	9512-5-0-41		9512-35-0-41			855-347-18-41	855-347-19-41			
CB	46W4	9530-1-0	9512-16-0-41		9512-37-0-41			855-347-18-41	855-347-19-41			
CB	47W1	9530-1-0	9512-5-0-41		9512-36-0-41			855-347-18-41	855-347-19-41			
CB	5W1	9530-1-0	9512-1-0-41		9512-18-0-41			855-347-18-41	855-347-19-41			
CB	5W5	9530-1-0	9512-3-0-41		9512-22-0-41			855-347-18-41	855-347-19-41			
CB	7W2	9530-1-0	9512-2-0-41		9512-20-0-41			855-347-18-41	855-347-19-41			
CB	8W8	9530-1-0	9512-4-0-41		9512-27-0-41			855-347-18-41	855-347-19-41			
CB	9W4	9530-1-0	9512-3-0-41		9512-23-0-41			855-347-18-41	855-347-19-41			
GFSH	01	9530-1-0	9513-309-1-0		9513-309-1-0							9513-404-1-0
GFSH	02F	9530-1-0	9513-309-3-0		9513-309-3-0							9513-404-1-0
GFSH	02M	9530-1-0	9513-309-2-0		9513-309-2-0							9513-404-1-0
IP	18M/F93	9530-1-0	9513-303-1	9513-303-11	9513-302-4	9513-302-14				855-347-3	855-347-11	9513-401-3
IP	29W9M/F93	9530-1-0	9513-303-3	9513-303-13	9513-302-5	9513-302-15				855-347-3	855-347-11	9513-401-4
IP	33W9M/F93	9530-1-0	9513-303-2	9513-303-12	9513-302-3	9513-302-13				855-347-3	855-347-11	M: 9513-406-1, F: 9513-401-2
IP	36W16M/F93	9530-1-0	9513-303-4	9513-303-14	9513-302-7	9513-302-17	855-347-18				955-347-11	9513-401-7
IP	48M/F93	9530-1-0	9513-303-1	9513-303-11	9513-302-2	9513-302-13			855-347-3			9513-401-1
IP	56M/F63	9530-1-0	9513-303-6	9513-302-16	9513-302-6	9513-302-16				855-347-3		9513-401-5
IP	56M/F93	9530-1-0	9513-303-1	9513-303-11	9513-302-1	9513-302-11				855-347-3		9513-401-1
MIP	28W12M/F93	9530-1-0	9513-305-4	9513-305-14	9513-304-4	9513-304-14	855-347-18				855-347-11	9513-402-4
MIP	29W9M/F93	9530-1-0	9513-305-5	9513-305-15	9513-304-5	9513-304-15	855-347-18	855-347-17			855-347-11	9513-405-5
MIP	30M/F63	9530-1-0	9513-305-1	9513-305-11	9513-305-1	9513-305-11				855-347-3		9513-402-1
MIP	30M/F93	9530-1-0	9513-305-1	9513-305-11	9513-304-1	9513-304-11				855-347-3		9513-402-1
MIP	30WA10M/F93	9530-1-0	9513-305-2	9513-305-12	9513-304-2	9513-304-12	855-347-18				855-347-11	9513-402-2
MIP	30WB10M/F93	9530-1-0	9513-305-3	9513-305-13	9513-304-3	9513-304-13	855-347-18	855-347-17			855-347-11	9513-402-3
MMIP	12W12	9530-1-0	9513-307-2	9513-307-12	9513-306-4	9513-306-14					855-347-11	N/A
MMIP	14W9	9530-1-0	9513-307-1	9513-307-11	9513-306-1	9513-306-11	855-347-18				855-347-11	9513-403-1
MMIP	18M/F93	9530-1-0	9513-307-2	9513-307-12	9513-306-2	9513-306-12				855-347-3		9513-403-2
MMIP	18M63	9530-1-0	9513-307-2	9513-307-12								9513-403-2
MMIP	31W6M/F93	9530-1-0	9513-307-3	9513-307-13	9513-306-3	9513-306-13	855-347-18				855-347-11	9513-403-3
PCD	9	9530-1-0	9512-1-0-41		9512-6-0-41		855-658-0-41					
PCD	15	9530-1-0	9512-2-0-41		9512-7-0-41		855-658-0-41					
PCD	25	9530-1-0	9512-3-0-41		9512-8-0-41		855-658-0-41					
PCD	37	9530-1-0	9512-4-0-41		9512-9-0-41		855-658-0-41					
PCD	50	9530-1-0	9512-5-0-41		9512-10-0-41		855-658-0-41					
PCDD	15	9530-1-0	9512-1-0-41		9512-11-0-41		855-751-0-41					
PCDD	26	9530-1-0	9512-2-0-41		9512-12-0-41		855-751-0-41					
PCDD	44	9530-1-0	9512-3-0-41		9512-13-0-41		855-751-0-41					
PCDD	62	9530-1-0	9512-4-0-41		9512-14-0-41		855-751-0-41					



Positronic Industries
connectpositronic.com

COMPLIANT PRESS-FIT TERMINATION CONNECTOR INSTALLATION TOOLS

USE INDICATED POSITRONIC TOOLS FOR BEST RESULTS

SERIES	VARIANT	Arbor Press	Male Seating	Male Seating, w/o shaft	Female Seating	Female Seating, w/o shaft	Replacement Pins, SIZE 22	Replacement Pins, SIZE 20	Replacement Pins, SIZE 8	Replacement Pins, SIZE 16	Replacement Pins, SIZE 12	Support Tool
PCDD	78	9530-1-0	9512-5-0-41		9512-15-0-41		855-751-0-41					
PCDD	104	9530-1-0	9512-16-0-41		9512-17-0-41		855-751-0-41					
PCI	A60W36	9530-1-0	9513-300-44-41	9513-300-64-41	9513-300-9-41	9513-300-29-41	855-916-19-0			Positions 1-30: 855-347-2-0, pos 55-56: 855-916-12-0, pos 57-60: 855-916-11-0		9513-400-2-41
PCI	B24W9	9530-1-0	9513-300-50-41	9513-300-70-41	9513-300-19-41	9513-300-39-41	855-916-19-0			Positions 1-6: 855-347-2-0, pos 22: 855-916-12-0, pos 23-24: 855-916-11-0		9513-400-4-41
PCI	B26W11	9530-1-0	9513-300-49-41	9513-300-69-41	9513-42-41	9513-300-62-41	855-916-19-0			855-347-2-0		9513-400-4-41
PCI	C16W7	9530-1-0	9513-300-68-41	9513-300-48-41	9513-300-43-41	9513-300-63-41	855-916-19-0			Positions 1-4: 855-347-2-0, pos 14: 855-916-12-0, pos 15-16: 855-916-11-0		9513-400-5-41
PCI	C3W3	9530-1-0	9513-300-56-41	9513-300-76-41	9513-300-57-41	9513-300-76-41				855-347-2-0		9513-400-9-41
PCI	H38	9530-1-0	9513-300-13-41	9513-300-33-41	9513-300-0-41	9513-300-20-41		855-916-26-0		Positions 1-20: 855-347-2-0, pos 36: 855-916-12-0, pos 37-38: 855-916-11-0		9513-400-0-41
PCI	H47	9530-1-0	9513-300-12-41	9513-300-32-41	9513-300-3-41	9513-300-23-41	855-916-19-0			Positions 1-20: 855-347-2-0, pos 45: 855-916-12-0, pos 46-47: 855-916-11-0		9513-400-0-41
PCI	H49W25	9530-1-0	9513-300-12-41	9513-300-32-41	9513-300-47-41	9513-300-67-41	855-916-19-0			Positions 1-20: 855-347-2-0, pos 45: 855-916-12-0, pos 46-49: 855-916-11-0		9513-400-0-41
PCI	M30W15	9530-1-0	9513-300-52-41	9513-300-72-41	9513-300-17-41	9513-300-37-41	855-916-19-0			Positions 1-12: 855-347-2-0, pos 28: 855-916-12-0, pos 29-30: 855-916-11-0		9513-400-3-41
PCI	M33W18	9530-1-0	9513-300-53-41	9513-300-73-41	9513-300-40-41	9513-300-60-41	855-916-19-0			855-347-2-0		9513-400-3-41



Positronic Industries
connectpositronic.com

COMPLIANT PRESS-FIT TERMINATION CONNECTOR INSTALLATION TOOLS

USE INDICATED POSITRONIC TOOLS FOR BEST RESULTS

SERIES	VARIANT	Arbor Press	Male Seating	Male Seating, w/o shaft	Female Seating	Female Seating, w/o shaft	Replacement Pins, SIZE 22	Replacement Pins, SIZE 20	Replacement Pins, SIZE 8	Replacement Pins, SIZE 16	Replacement Pins, SIZE 12	Support Tool
										Positions 1-10: 855-347-2-0, pos 32: 855-916-12-0, pos 33-34: 855-916-11-0		9513-400-3-41
PCI	M34W13	9530-1-0	9513-300-54-41	9513-300-74-41	9513-300-14-41	9513-300-34-41	855-916-19-0					9513-400-3-41
PCI	M37W16	9530-1-0	9513-300-55-41	9513-300-75-41	9513-300-41-41	9513-300-61-41	855-916-19-0			855-347-2-0		9513-400-3-41
PL	A03	9530-1-0	9513-1-0-41		9513-13-0-41					855-658-1-41		
PL	A04	9530-1-0	9513-2-0-41		9513-14-0-41					855-658-1-41		
PL	A06	9530-1-0	9513-3-0-41		9513-15-0-41					855-658-1-41		
PL	A08	9530-1-0	9513-4-0-41		9513-16-0-41					855-658-1-41		
PL	B06	9530-1-0	9513-5-0-41		9513-17-0-41					855-658-1-41		
PL	B08	9530-1-0	9513-6-0-41		9513-18-0-41					855-658-1-41		
PL	B10W2	9530-1-0	9513-7-0-41		9513-30-0-41		855-347-18-41	855-347-19-41				
PL	B12	9530-1-0	9513-7-0-41		9513-19-0-41					855-658-1-41		
PL	B16	9530-1-0	9513-8-0-41		9513-20-0-41					855-658-1-41		
PL	B20	9530-1-0	9513-33-0-41		9513-34-0-41					855-658-1-41		
PL	B3W3	9530-1-0	9513-6-0-41	9513-6-10-41	9513-18-1-41	9513-18-11-41					855-347-11-41	
PL	C09	9530-1-0	9513-9-0-41		9513-21-0-41					855-658-1-41		
PL	C12	9530-1-0	9513-10-0-41		9513-22-0-41					855-658-1-41		
PL	C16W4	9530-1-0	9513-11-0-41		9513-31-0-41		855-347-18-41	855-347-19-41		855-658-1-41		
PL	C18	9530-1-0	9513-11-0-41		9513-23-0-41					855-658-1-41		
PL	C24	9530-1-0	9513-12-0-41		9513-24-0-41					855-658-1-41		
PL	C30	9530-1-0	9513-25-0-41		9513-26-0-41					855-658-1-41		
SGM (C)	4	9530-1-0	9513-41-4-41	9513-43-4-41	9513-42-4-41	9513-44-4-41						9513-40-4-41
SGM (C)	5	9530-1-0	9513-41-5-41	9513-43-5-41	9513-42-5-41	9513-44-5-41						9513-40-5-41
SGM (C)	7	9530-1-0	9513-41-7-41	9513-43-7-41	9513-42-7-41	9513-44-7-41						9513-40-7-41
SGM (C)	9	9530-1-0	9513-41-9-41	9513-43-9-41	9513-42-9-41	9513-44-9-41						9513-40-9-41
SGM (C)	11	9530-1-0	9513-41-11-41	9513-43-11-41	9513-42-11-41	9513-44-11-41						9513-40-11-41
SGM (C)	14	9530-1-0	9513-41-14-41	9513-43-14-41	9513-42-14-41	9513-44-14-41						9513-40-14-41
SGM (C)	20	9530-1-0	9513-41-20-41	9513-43-20-41	9513-42-20-41	9513-44-20-41						9513-40-20-41
SGM (C)	26	9531-1-0	9513-41-26-41	9513-43-26-41	9513-42-26-41	9513-44-26-41						9513-40-26-41
SGM (C)	29	9531-1-0	9513-41-29-41	9513-43-29-41	9513-42-29-41	9513-44-29-41						9513-40-29-41
SGM (C)	34	9513-1-0	9513-41-34-41	9513-43-34-41	9513-42-34-41	9513-44-34-41						9513-40-34-41
SGM (C)	44	9513-1-0	9513-41-44-41	9513-43-44-41	9513-42-44-41	9513-44-44-41						9513-40-44-41
SGM (C)	50	9513-1-0	9513-41-50-41	9513-43-50-41	9513-42-50-41	9513-44-50-41						9513-40-50-41
SP	all	Contact Technical sales. Because of the almost unlimited configurations, each configuration would have a unique set of installation tooling.										
VPB		9530-1-0	9513-308-1-41		9513-308-1-41							M: 9513-400-8-41, F: 9513-400-6-41
VPN		9530-1-0	9513-308-7-41									9513-400-9-41